

**DCF 77 antenna
AP 390**
5WG1 390-3EY01

Product and Applications Description




The DCF77 antenna AP 390 is a surface mounted device.

The device provides a DCF77 signal for up to ten (10) 4-channel radio controlled time switches REG 372/02. The maximum permissible wire length between AP 390 and REG 372/02 is 200m.

Application programs

Because the DCF 77 antenna is not a bus device no application program exists.

Application example

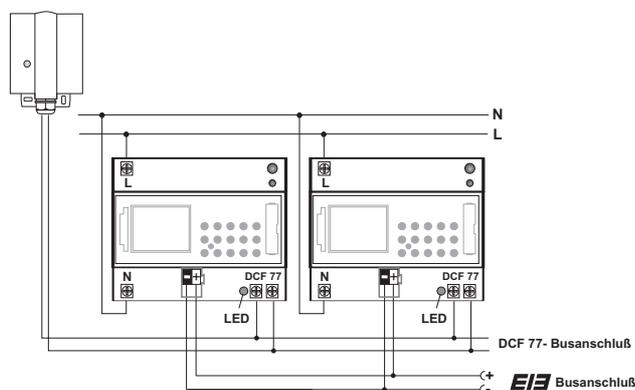

Technical Specifications

Power supply

from REG 372/02 via connecting wire

Power consumption

ca. 8 mA

Operational conditions

- Signal Range: 1000 km from Frankfurt a. M.
- For use with Siemens 4-channel radio controlled time switch only (5WG1 372-3EY02)
- Max. wire length between AP 390 and REG 372/02: 200 m
- Max. burden: ten (10) REG 372/02

Antenna data

- Sensitivity: 100 μ V/m

Display elements

- 1 red LED: flashes every second when receiving the DCF77 radio signal

Connections

- Terminals for NYM 3 x 1,5 mm²

Physical specifications

- polymer casing
- dimensions: 110 x 72 x 54mm (H x B x T)
- weight: ca. 172 g
- fire load: ca. 3300 KJ \pm 10%
- installation: surface mounted

Electrical safety

- Fouling class (according to IEC 60664-1): 2
- Protection: IP54 according to EN60529
- Device complies with: EN 50 090-2-2 and IEC 60664-1: 1992

Reliability

- Failure rate: 177 fit at 40°C

Electromagnetic compatibility

Complies with EN 50081-1, EN 61000-3-2, EN 61000-3-3 and EN 50082-1

Environmental specifications


- Ambient temperature operating: - 20°C to + 70° C
- Climatic conditions: EN 50090-2-2
- Ambient temperature non-operating: - 25°C to + 70° C
- Rel. humidity (non-condensing): 5% to 93%

CE norm

Complies with EMC regulations (residential and functional buildings)

Dimension Diagram

Dimensions in mm

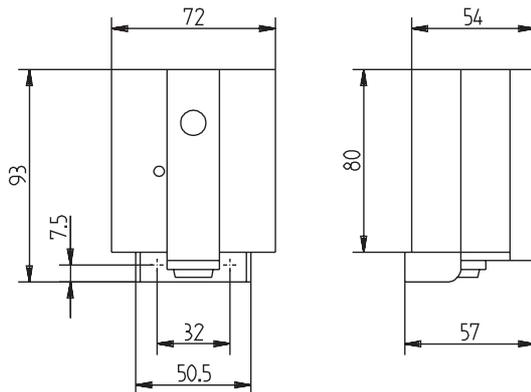

Installation Instructions



WARNING

- The device must be mounted and commissioned by an authorized electrician.
- The prevailing safety and installation rules must be heeded.
- The device must not be opened. A device suspected faulty should be returned to the local Siemens office.

Mounting and Wiring

We recommend to mount the device

- outside the distribution board (minimum distance: 4 m)
- under the roof
- or in a protected outdoor space


Note:

Avoid mounting the device in the vicinity of

- TV sets
- Switched power supplies
- Radio frequency sources
- Metallic devices
- RF transmitters
- Radiological devices
- Personal computers

Warning:

Mount the DCF77 antenna in a vertical position only!

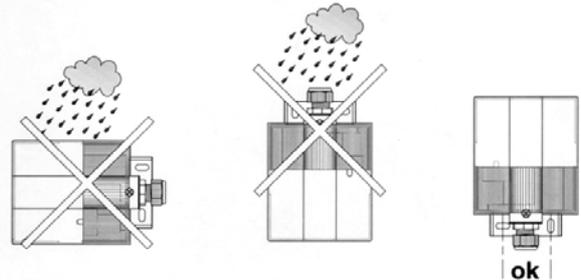


Consequences of false installation:

Moisture and/or dust can get into the device!
Device failure and short circuiting the bus line are potential consequences.

Wiring and orientation of the antenna

- First connect the 4-channel radio controlled time switch REG 372/02 with 230 V~ and then with the bus line.
- Connect the DCF77 antenna AP 390 with the radio controlled time switch REG 372/02 only.
- **The polarity of the connection is important!**
The polarity is correct when the yellow LED is NOT lit.
- Safety extra low voltage is used for the antenna signal. Proper isolation from mains voltage must be provided for.
- For proper orientation of the antenna swivel the antenna horizontally on the mounting bracket until the LED on the front flashes every second.
- Orientation: The arrow should point to Frankfurt a. M.

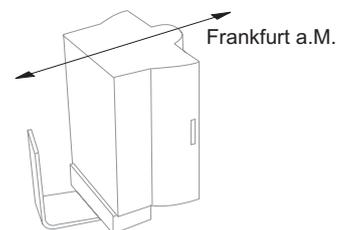

Mounting the protective cap

- Place the protective cap over the installed device.
- Lock the cap by tightening the screw.