

Curve DMX Sequenzer

Instructions for use

Art. Nr. C-03803

Safety information:

Fitting and assembly of electrical appliances must only be done by an electrician. Inadherence to the installation instructions could result in fire or other dangerous consequences.

The DMX sequencer is a protection rating III device. Be sure that the voltage in the DMX and the primary side correspond to the SELV- values.

Caution:

During installation and maintenance, measures must be taken to prevent a polarity reversal of the supply voltage.

This device is only usable as a data receiver.

Setting the constant current:

BEFORE INITIAL OPERATION, USE THE DIP SWITCHES WITHIN THE UNIT TO SET THE CONSTANT CURRENT TO THE CORRECT SETTING!!

To do this, remove the cover and set the dip switches to the required setting for the constant current as illustrated below.

Caution: Only one dip switch may be in the [ON] position. Dip switch 4 must always remain in the [OFF] position.



350mA



500mA



700mA

Connection

The addressable DMX Sequencer can in principle be integrated at any point in the DMX bus.

Input connections, refer to the illustration:

- (1) 24V DC Supply across the terminals
- (2) DMX IN – OUT through the terminals
- (3) terminal connections for external buttons for manual control.

Output connections, refer to the illustration:

- (4) Jumper for manual operation
- (5) RGB LED channels

Use only 3 pole screened cable for the DMX bus.

Best: 120 Ohm cable for the DMX. Always connect the earth to the negative terminal of the supply. Only connect up to 32 units to one bus; if more than this, a DMX amplifier must be used.

The use of unsuitable cables may cause the bus to malfunction.

Technical data

Supply voltage	24 VDC
Output current	350 / 500 / 700mA
Max. output voltage	22V DC
Connection load	1 - 5 LED / channel
Output short circuit protection	Yes
Reverse polarity protection	Yes
DMX transfer rate	250.000 Bps
Working temperature	-5 °C to +40 °C
Connections	DMX / load by means of single wire 0,75-1,5mm, screw terminals
Output signal	PWM / 245Hz



Note:

In order to prevent malfunction, the maximum cable length, supply points, maximum distances etc. must be observed.

Warranty

We provide a guarantee in accordance with the law. Please send the device (free postage) to our central customer service office, with a description of the fault.

DMX Sequencer wiring diagram:

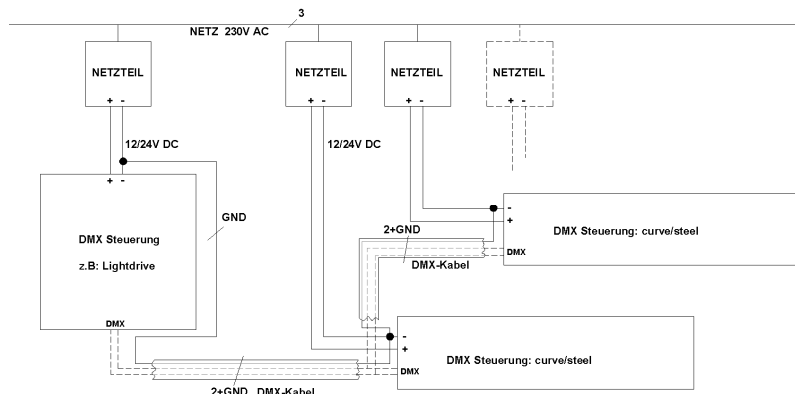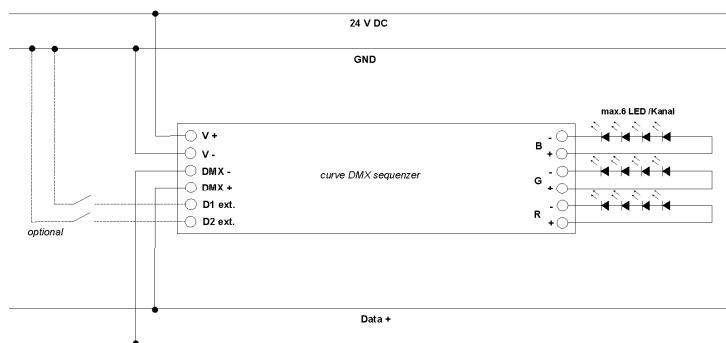

IMPORTANT: To ensure correct functioning of the DMX bus when using several voltage sources, the negative pole of the power supply and the actuator must be connected together with the GND of the DMX, to avoid a shift of potential.

Addressing:

The address of the DMX Sequencer is already pre-programmed.

Output RED = Address 001
Output GREEN = Address 002
Output BLUE = Address 003

Manual operation:

Switching between DMX and manual operation is done by means of the jumper JS1. By pulling the jumper, manual mode is selected. Pushing button D2 for 2 seconds starts the pre-programmed chromatic sequence. This contains 14 light scenes. To change to the next state in the chromatic circle, press button D1 for a maximum of half a second. By pressing D2 for a short time, the current colour values can be stored. Now you are within the stored colour values and you can turn these off or on and dim them using button D1. The current stored colour value, together with its brightness, is selected when the device is switched on, whether by switch or following an interruption in the supply current.

HEAD OFFICE

Customer Services Centre:
BILTON LED LIGHTING
Loferer straÙe.2
5760 Saalfelden/ Austria
Tel: +43 6582 71164
Fax: +43 6582 71164 -10
service@bilton.at

Produced and tested by:
Micro Systeme GmbH
Hirnreit 113
5771 Leogang