

Window Control Arexa



elsner[®]
elektronik

Installation and Operation

Description.....	3
Scope of supply	3
Commissioning procedure	3
Options for connection and control	3
Overview of available automatic functions	4
Operation	5
Key functions and display symbols of the meteorological data display	5
Display of lightness and wind speed	6
Manual operation.....	7
Setting of automatic	9
A. Indoor temperature for opening	10
B. Outdoor temperature block.....	11
C. Wind alarm	11
Table for wind speeds	12
D. Rain alarm.....	13
E. Storage of automatic settings.....	13
Basic settings	14
1. Radio connection to the weather station	16
2. Rotational direction of the motor	17
3. Operating direction	18
4. Operating command in case of wind or rain alarm	19
5. Sending of meteorological and automatic data	20
6. Opening position	21
6.1. Closed position	22
6.2. Setting of the desired position	22
7. Saving of basic settings	23
Safety instructions for automatic and alarm functions	23
Installation and Commissioning.....	25
Installation of weather station and connection of drive mechanism	26

Position	26
Attaching the mount.....	26
Preparation of the weather station.....	28
Connection of voltage supply and drive mechanism.....	29
Mounting of the weather station.....	30
Details for the installation of the weather station.....	30
Installation of operating unit	31
Notes on radio installations	31
Commissioning	31
Sensor testing	33
Sun sensor testing	33
Wind sensor testing.....	33
Rain sensor testing	33
Temperature sensor testing.....	33
Service	34
Service and maintenance	34
Weather station	34
Operating unit	34
Insert batteries (operating unit)	34
Error messages	35
Query service data	37
Factory settings	37
Abbreviations	37
Technical data	37
Operating unit	38
Weather station	38
Connection diagram for weather station.....	39
View of rear side and drill hole plan for the weather station	40
View of rear side and drill hole plan for the operating unit.....	41
Connection samples for several drive mechanisms as group	42
Personal setting data of the automatic.....	43

Arexa • from software version operating unit 3.0, Arexa weather station 3.0 • Status: 01/10/2009.
Errors excepted. Subject to technical changes.

Description

The Arexa window control system has been developed for the automatic control of a window (or a group of windows) and for comfortable manual operation. The control system offers a highest degree of flexibility for installation and setting and may therefore be adjusted individually to different conditions. Please anxiously use this instruction manual in order to adjust the automatic function to your requirements.

Scope of supply

The Arexa window control system consists of weather station and operating unit. Batteries for the operation of the operating unit are included in the scope of delivery (2 pcs.).

Commissioning procedure

Installation, inspection, commissioning and troubleshooting of the control system must only be carried out by a competent electrician.



Proceed as follows when commissioning the Arexa control system:

1. Installation and connection (see chapter „Installation and commissioning“)
2. Basic setting (see chapter „Basic settings“)
3. Setting of the automatic (see chapter „Setting of automatic“)

Options for connection and control

A drive mechanism for windows may be connected to the Arexa control system. If several windows shall be controlled together, the connection via a group control relay is possible.

The following **environmental parameters** are measured and displayed:

- Outdoor and indoor temperature
- Lightness
- Wind speed
- Precipitation

Arexa may be deployed in the control system XS as control centre and as transducer. In this case, the control is upgraded with motor control units and operating units of system XS.

Overview of available automatic functions


- Open when a selectable indoor temperature is reached
- Close and keep closed below a selectable outdoor temperature (outdoor temperature block)
- Open until a programmable position is reached
- Close when a selectable wind speed is reached (wind alarm, function may be deactivated)
- Close in case of rain (rain alarm, function may be deactivated)

The window is closed in automatic mode as soon as the value of a set indoor temperature falls below or in case of rain/wind alarm.

The wind and rain protection functions are also active in manual mode if they have been set in automatic.

Operation

Key functions and display symbols of the meteorological data display

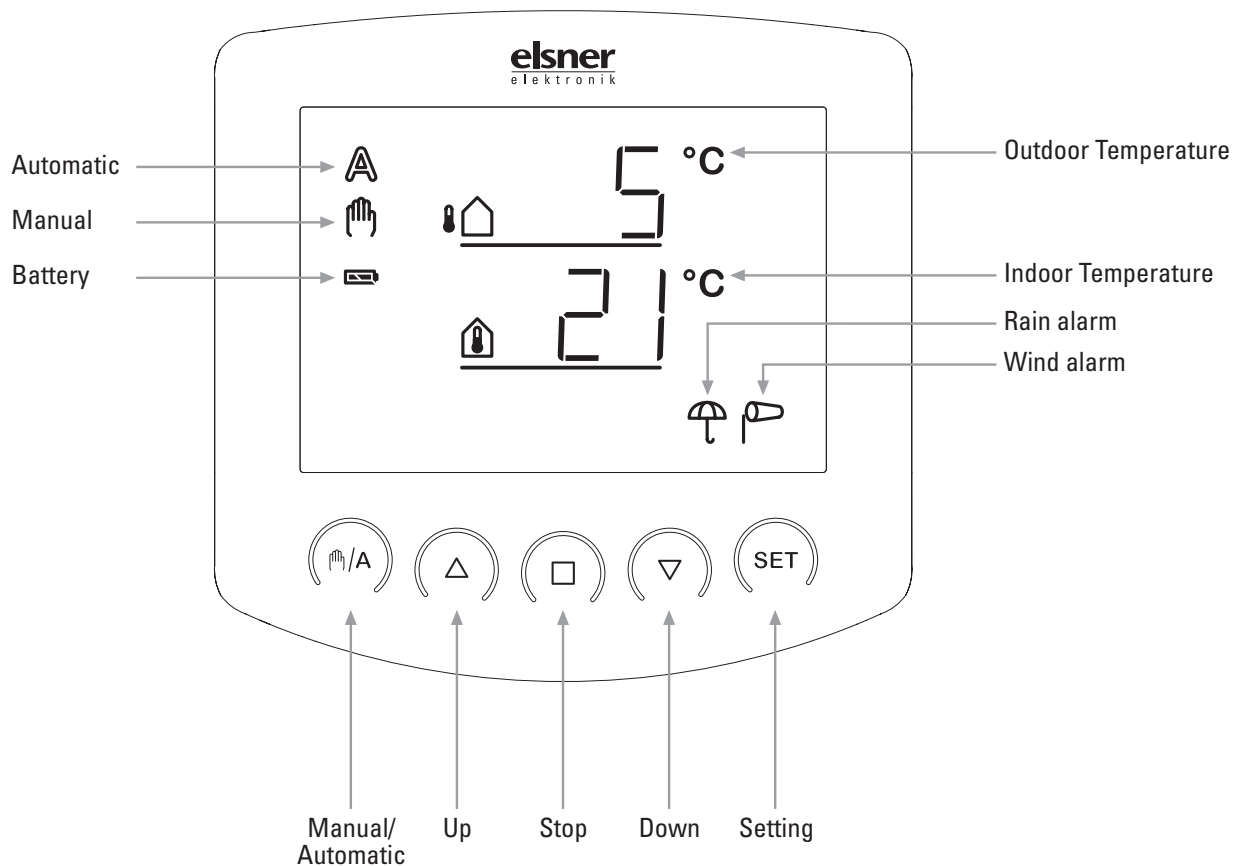

The basic position of the operating unit of the control system displays the current outdoor temperature (upper line) and the indoor temperature (lower line) as well as the function mode (automatic or manual), the battery load and the current alarm messages for rain or wind. The meteorological data are updated once per minute (and in case of a keystroke).



Outdoor temperature



Indoor temperature



Battery symbol (indicates the charge status of the battery) - full



- half full



- empty



Automatic mode activated



Manual mode activated. The connected drive mechanism was operated manually (with arrow keys) or /A key was pressed. Thus, the automatic functions are deactivated, there is no control in terms of temperature. The safety functions rain alarm and wind alarm are still activated. The control is in manual mode until you change to automatic mode with /A key.




Rain alarm. The window is closed, manual operation is blocked. The rain protection function may be turned on and off in the automatic settings.



Wind alarm. The window is closed, manual operation is blocked. The wind protection function may be set up or turned off in the automatic settings.

Display of lightness and wind speed

Press the SET key during temperature display once for a short moment, and current lightness (in kilolux, kLux) and wind speed (in meters per second, m/sec) are displayed. The values are updated every 4 seconds.

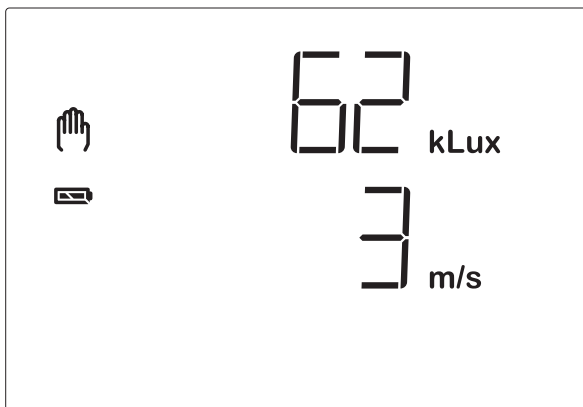

Note: During the first approx. 90 seconds after the return of voltage at the weather station, the wind value is not displayed correctly (e.g. after a power fail or in case of a first start). Therefore, manual operation is blocked in this period of time in case of activated wind alarm.

If you press the SET key again for a short moment, you get back to the temperature display (or to the central command display, see next chapter). After approx. 60 seconds, the display switches automatically to the temperature display.

Manual operation

Manual control as well as the presetting of the automatic functions and the basic setting of the connected shading is accomplished with the keys of the operating unit.



The connected window may be manually operated with the keys \triangle , \square and ∇ . The arrow keys are provided with a time automatic. By short pressing (less than 1 second), the window may be exactly positioned. If the key is pressed more than 1 second, the drive mechanism moves automatically to the final position. If you press \square , the drive mechanism stops.

In case of rain or wind alarm, the manual operation is blocked.









Manual/automatic

Key hand/A switches between automatic mode (display A) and manual mode (display hand). After the manual operation with the keys \triangle , \square or ∇ , the control system is in manual mode. The automatic functions then are deactivated, there is no control in terms of temperature. With key hand/A , the control is reset to automatic (display A).

If the sending of meteorological data and automatic commands has been activated (see chapter 5 of the basic settings), you additionally obtain the following display after the manual mode:



In order to get to the display, press key /▲ twice shortly in automatic mode (A) and once shortly in manual mode ().

As long as the display shows , manual operating commands of this operating unit are submitted to all drive mechanisms in system XS. During this display, use the keys ,  and  in order to centrally operate all drive mechanisms.



With the **SET** key and by pressing shortly, you access the display of lightness and wind speed.

By pressing long, you access the setting menu of the automatic and the basic setting. For this purpose, please read chapters “Setting of automatic” or „Basic settings“.

Setting of automatic


For an optimal aeration, the values for automatic operation must be adjusted to the local conditions. The following settings are queried one after the other:


- A. Indoor temperature for opening
- B. Outdoor temperature block
- C. Wind alarm
- D. Rain alarm
- E. Storage

This is how you access the automatic settings:



In meteorological data display, press the SET key for at least 3 seconds in order to access the automatic setting.

You are in the automatic settings as soon as the symbols **A** and  are shown left in the display. You can see the first parameter (lightness) which must be set.

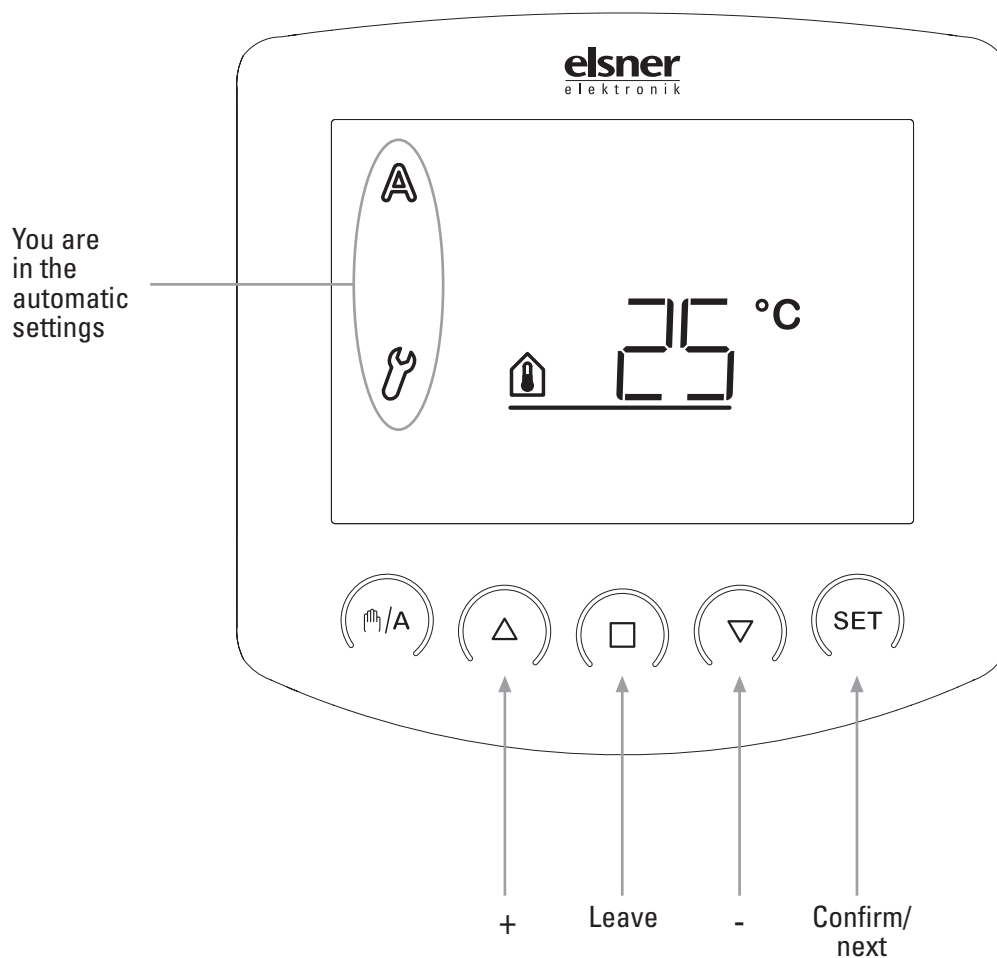


You may leave the automatic settings at any time by pressing the key □. The accomplished changes of the values are not saved in this case.

If you do not press any key in the automatic settings for 5 minutes, the display automatically changes to temperature display. Accomplished settings are not saved either.

A. Indoor temperature for opening

In the automatic settings, you must indicate at first the lightness from which shading shall start.

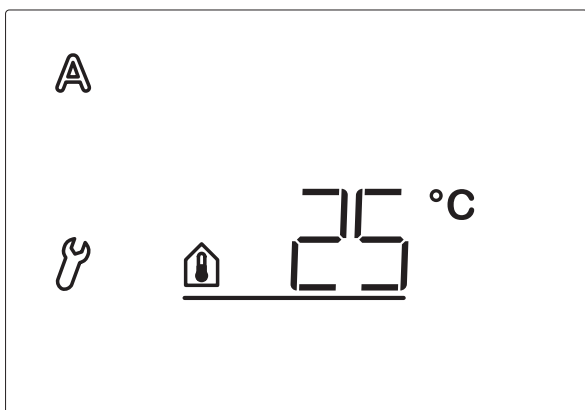

As soon as the value indicated here is exceeded, the automatic opens the window (unless the blocking value for the outdoor temperature has fallen below, see next parameter)


The presetting is 25°C.

Adjust the value with △ (higher) and ▽ (lower) or select OFF (off) in order to switch off the function. You reach the setting OFF by pressing ▽ once more when the display shows "5°C". If you select OFF, there is no control in terms of temperature. Therefore, the following automatic parameter (chapter B) is skipped. The window may be operated manually and the protection against wind and rain is active (if set accordingly, see chapter "C. Wind alarm" and "D. Rain alarm").

Press SET in order to get to the setting of the next parameter.

B. Outdoor temperature block

After the setting of the indoor temperature, now select the maximum outdoor temperature up to which the window shall remain closed.

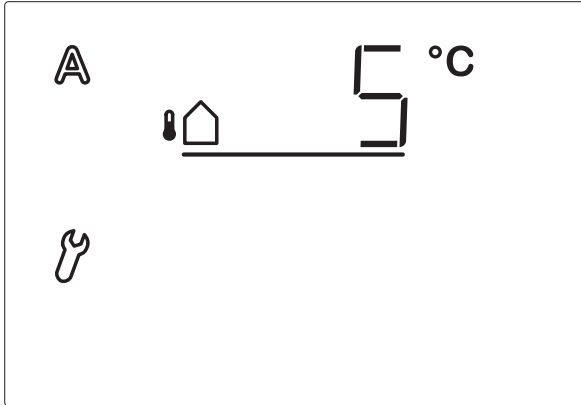

The outdoor temperature block keeps the window closed as long as the temperature is below the selected value. This means that in automatic mode, an opened window is closed and not opened again if the indoor temperature value (chapter A) is exceeded. Thus avoids energy losses during ventilation and protects plants from cold external air.


The presetting for the outdoor temperature block is 5°C.

Adjust the value with \triangle (higher) and ∇ (lower) or select **OFF** (off) in order to switch off the outdoor temperature block. You reach the setting **OFF** by pressing ∇ once more when the display shows "-20°C".

Press **SET** in order to access the setting of the next parameter.

C. Wind alarm

After the setting of the outdoor temperature block, now provide the value for the wind protection function.

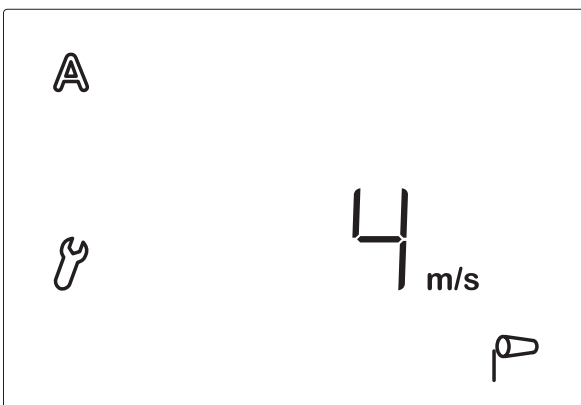

The wind alarm protects the window and furniture and fixtures from damage. If the indicated wind value is exceeded, the window closes and the manual operation is blocked.

Wind speed is indicated in m/sec (meters per second). The wind alarm is maintained for 5 minutes. If the set wind value is exceeded within these 5 minutes, the stop time starts from the beginning.

The following table (see next chapter) serves as indication in order to set the wind value. Depending on the position of the winter garden and the assembly position of the weather station, different wind values may be optimal. Observe the behaviour of the window in case of wind and correct the wind value accordingly.

The presetting for the retraction in case of wind is 4 m/sec.

Adjust the value with \triangle (higher) and ∇ (lower) or select **OFF** (off) in order to deactivate the function.


Then press **SET** in order to access the setting of the next parameter.

Table for wind speeds

Description	m/sec	km/h	Beaufort	knots
Calm	< 0,3	< 1,1	0	< 1
Almost calm	0,3-1,5	1,1-5,4	1	1-3
Very weak wind	1,6-3,3	5,5-11,9	2	4-6
Weak wind	3,4-5,4	12,0-19,4	3	7-10
Moderate wind	5,5-7,9	19,5-28,4	4	11-16
Fresh wind	8,0-10,7	28,5-38,5	5	17-21
Very fresh wind	10,8-13,8	38,6-49,7	6	22-27
Strong wind	13,9-17,1	49,8-61,5	7	28-33
Very strong wind	17,2-20,7	61,6-74,5	8	34-40
Storm	20,8-24,4	74,6-87,8	9	41-47
Heavy storm	24,5-28,4	87,9-102,2	10	48-55
Gale-force wind	28,5-32,6	102,3-117,3	11	56-63
Hurricane	> 32,6	> 117,3	12	> 63

D. Rain alarm

After the setting of the wind alarm, now select whether the rain alarm shall be switched on or off.

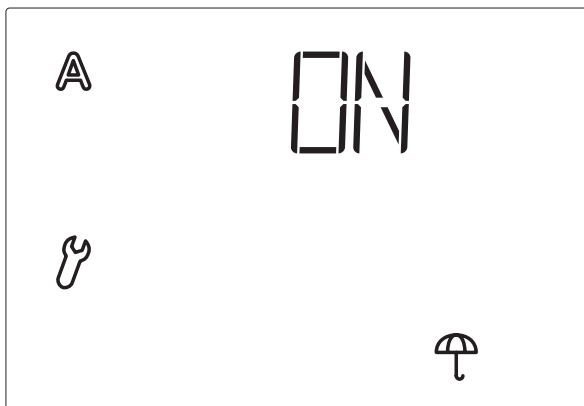


The rain alarm protects furniture and fixtures from damage. In case of rain, the window is automatically retracted and the manual operation is blocked.

The rain message is maintained for 5 minutes. If the system recognises rain again during these 5 minutes, the stop time starts from the beginning.

In the presetting, the rain alarm is activated (display **ON**). With the arrow keys, you may select between activated (display **ON**) and deactivated (display **OFF**). Then press SET in order to get to the storage of the setting.

E. Storage of automatic settings

At the end of the entry of automatic settings, the symbol **SAV** (save) asks whether the accomplished setting shall be saved.

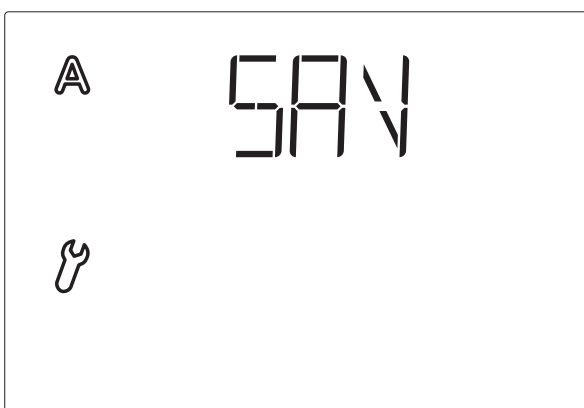

Press the SET key in order to save your entered data and to access the meteorological data display. With ☐, you quit the automatic settings without saving.

Basic settings



These are the basic settings of the device for the commissioning of the control system. The following settings are queried one after the other:

1. Radio connection to the weather station
2. Rotational direction of the motor
3. Operating direction
4. Operating command in case of wind or rain alarm
5. Sending of meteorological and automatic data
6. Opening position
7. Save

This is how you access the basic settings:




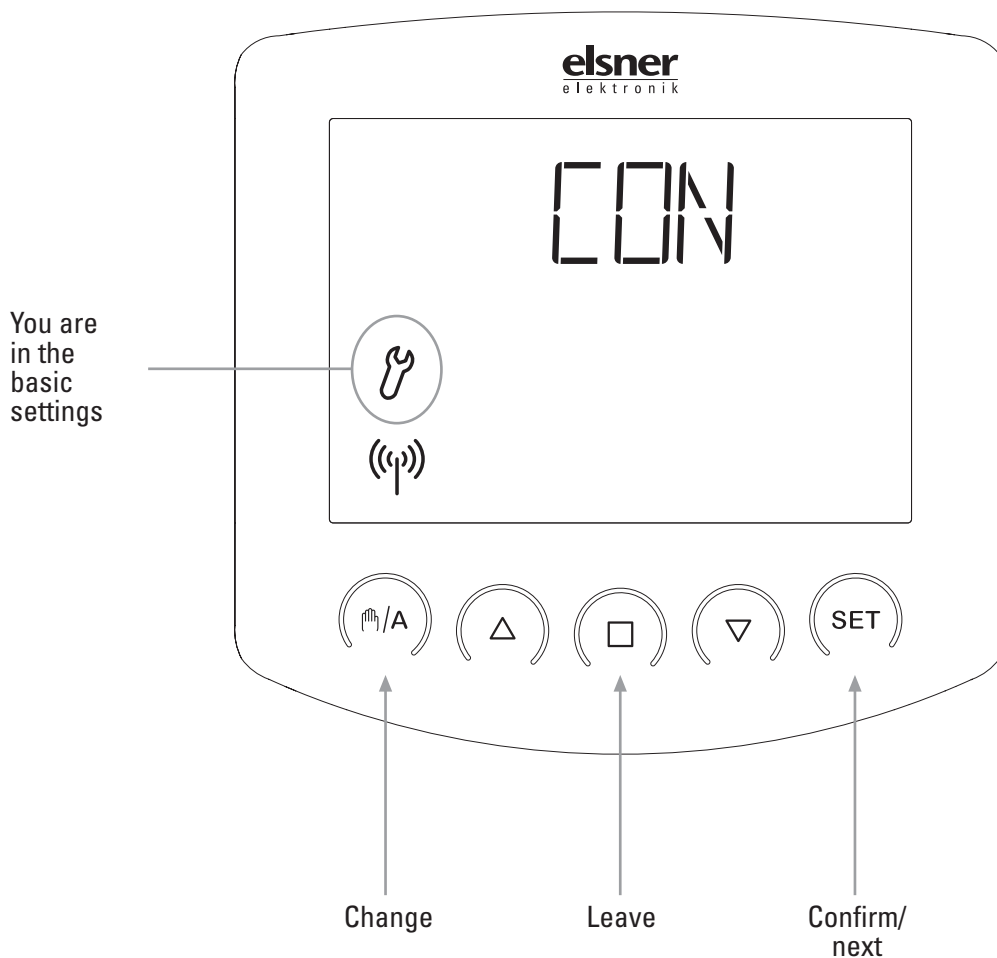
In meteorological data display, press the SET key for at least 3 seconds in order to access the automatic setting.

You are in the automatic settings as soon as the symbols  and  are indicated left in the display.



Then press again SET for at least 3 seconds in order to access the basic settings.

You are in the basic settings as soon as the symbol  is indicated left in the display and as soon as you can see the first setting step (radio connection).



You may leave the basic settings at any time by pressing the key ☐. The accomplished changes are not saved in this case.

If you do not press any key in the basic settings for 5 minutes, the display automatically changes to temperature display. Accomplished settings are not saved either.

1. Radio connection to the weather station

The first step is the teaching in (or later the deletion) of the radio connection.



The teaching in may only be accomplished by a qualified person for electronics because the programming key is inside the weather station.



Select the desired step with the /▲ key:

CON	(continue) in order to skip this step,
LEA	(learn) in order to teach in a radio connection to the weather station,
CLR	(clear) in order to delete an existing radio connection.

Confirm your selection with the SET key.

As soon as you have confirmed LEA (learn) with the SET key, the radio symbol stops flashing and the radio waves are animated (they “run”).


Now press the orange programming key inside the weather station in order to teach in the radio connection (you can find a diagram of the circuit board in the chapter "Preparation of the weather station").

The learning has been successful if the LED next to the programming key shortly flashes twice and the display skips to step 2 of the basic settings (rotational direction of the motor).

As soon as you have confirmed CLR (clear) with the SET key, the radio connection is deleted. The display automatically skips to LEA (learn) in order to enable the teaching in of a new connection.

2. Rotational direction of the motor

After the teaching in of the radio, you may now set the rotational direction of the motor.

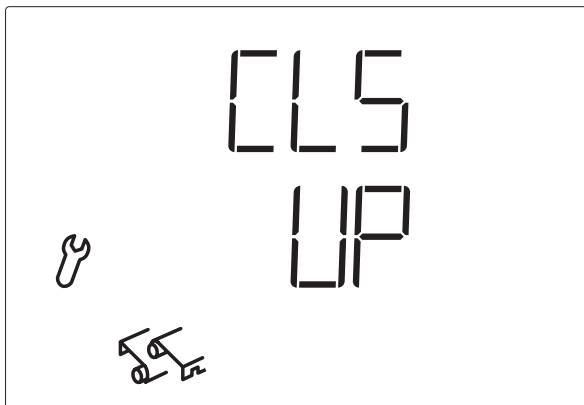

If the up and down connection cables have been mixed up when connecting the drive mechanism, this may be corrected in this step. First open the window a little bit for the rotational direction test. Check both arrow keys and make a setting in the display, whether the window closes again with ∇ or with Δ .

If the window closes (CLS,close) with key Δ , then select the display UP (up) with the key \Rightarrow/Δ .

If the window closes (CLS, close) with key ∇ , then select the display \downarrow (down) with the key \Rightarrow/Δ .


Press the SET key in order to access the next setting step.

Rain and wind alarm are deactivated for this test.



3. Operating direction

After the setting of the rotational direction of the motor, now select which key shall open the window.

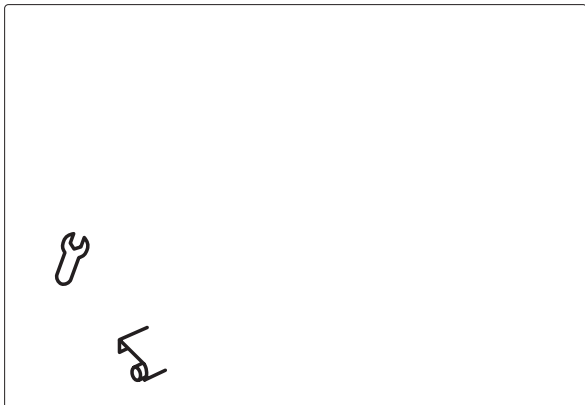

In this step, you change the allocation of the arrow keys so that they correspond with the operating direction of the window. You may directly test the setting with the arrow keys.

Press the key /▲ in order to switch between the displayed symbols. Select



if the window shall open with the key ▲ or

if the window shall open with the key ▼.

Press the SET key in order to access the next setting step.

Rain and wind alarm are deactivated for this test.



4. Operating command in case of wind or rain alarm


After the setting of the operating direction, you may now select whether the operating command in case of wind or rain alarm is temporary or permanent.




After the wind or rain alarm has been activated, the window is closed. The operating command for the connected drive mechanism either ends after 4 minutes or is permanently maintained as long as the alarm message exists. The permanent operating command is necessary if Arexa is used as control centre for wired motor drive units (e. g. IMMSG 230) which control several drive mechanisms.

Press the key /▲ in order to switch between the displays Off and On.

Select

 if in case of alarm, the operating command shall stop after 4 minutes (setting for conventional window control systems) or

 if in case of alarm, the operating command shall be permanently activated (operating command ends as soon there is no alarm message anymore).

Press the SET key in order to access the next setting step.

5. Sending of meteorological and automatic data

After the setting of the operating command in case of wind or rain alarm, you may now select, whether the meteorological data and the automatic commands of Arexa shall be submitted by radio to the motor control units of system XS.



Leave this display at **OFF** if Arexa is used as conventional single-channel control system. The function „Sending of weather and automatic data“ must only be activated if Arexa shall cooperate with motor control devices (e.g. XS MSG2-AP) in the control system XS.

Press the key /▲ in order to switch between the displays Off and On.

Select

OFF if no meteorological data and automatic commands shall be sent (setting for conventional window control) or


ON if the meteorological data and the automatic commands of the Arexa shall be sent to motor control devices of system XS (setting for the use in the control system XS).

This setting offers the option to centrally operate all drive mechanisms in system XS from the Arexa operating unit (see chapter “Manual operation”).


Press the SET key in order to access the next setting step.

6. Opening position

After the setting of the sending of meteorological and automatic data, you may now teach in an opening position.

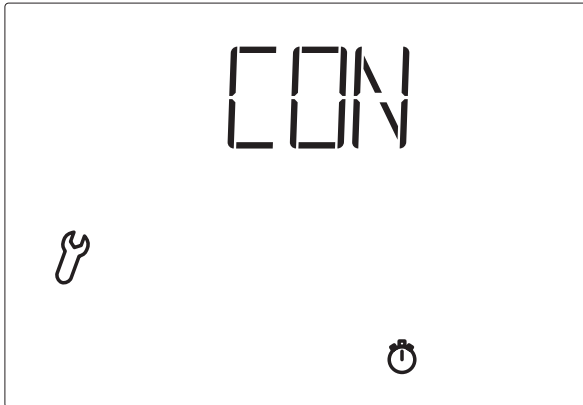

You may determine an individual position for the window up to which it opens in automatic mode.


Select the desired step with the /▲ key:

- | | |
|-----|--|
| CON | (continue) in order to skip the setting of the opening position. The window is then always completely opened by the automatic. In this case, continue as described in chapter „7. Saving basic settings“. |
| LEA | (learn) in order to teach in the opening position. |
| CLR | (clear) in order to delete an already taught in opening position. The window is then again always completely opened by the automatic. In this case, continue as described in chapter „7. Saving basic settings“. |

Confirm your selection with the SET key.

6.1. Closed position


After having confirmed `LEA` (learn), the command `CLS` (close) appears.

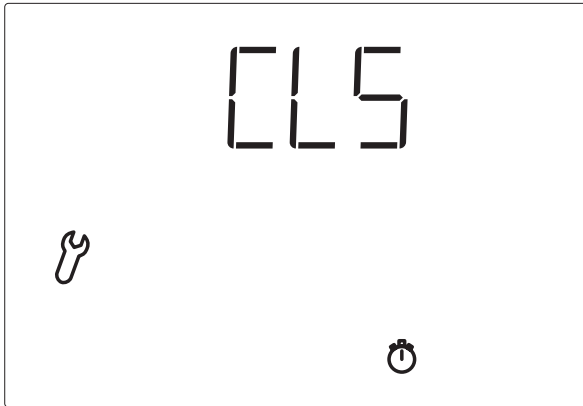

At first, completely close the window. Then press the SET key in order to access the next setting step.


6.2. Setting of the desired position


The command `OPN` (open) appears.

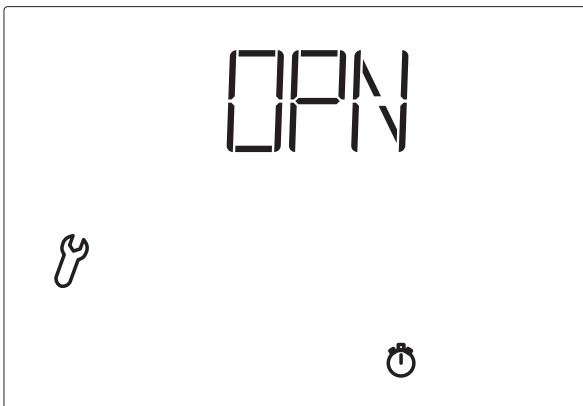


Now open the window as far as the automatic shall do it later. Then press the SET key in order to access the next setting step.

7. Saving of basic settings

At the end of basic settings, the symbol  (save) asks whether the accomplished setting shall be saved.

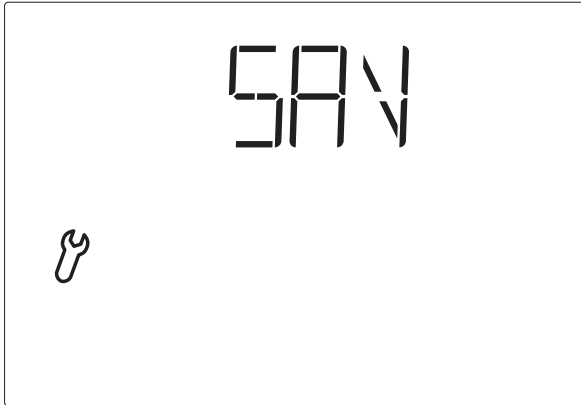

Press the SET key in order to save your entered data and to access the meteorological data display. With , you quit the basic settings without saving.

After the basic setting, the values for the automatic functions may be set. In case of first commissioning, please check the function of the sensors in advance (see chapter "Sensor testing").

Safety instructions for automatic and alarm functions

In case of power fail at the weather station, the control system cannot actuate the connected drive mechanisms anymore! If the complete scope of functions must be guaranteed in case of power fail, an emergency power generator with an according switch-over from mains operation to emergency operation must be installed.

Saved settings in the programme of the control also retain in case of power fail. After the return of voltage, the control is in automatic mode.

If the radio connection between operating unit and weather station is interrupted (e.g. by radio interference or empty batteries in the operation unit), it is not possible anymore to take manual action. The control remains in the current mode (manual or automatic). The automatic mode continues as preset until there is radio connection again, however without considering the indoor temperature. In case of a preset manual mode, the wind and rain protection functions are retained as well.

If cleaning and maintenance works in the environment of the awing(s) or blind(s) must be accomplished, the control system (weather station) must be switched to neutral by switching off the installed fuse and be prevented from unintentional restart. Thus you ensure that the connected drive mechanisms do not start operation.

In case of beginning rain, a certain period of time, which depends on the amount of rain, may pass by until the weather station recognises that there is rain.

In addition, a closing time must be taken into account for electrically operated windows or sliding roofs. Any items that are sensitive to moisture should therefore not be placed in areas where they might be damaged by penetrating moisture.

Please also consider that for example in case of power failure and incipient rain the windows are no longer automatically closed if no emergency power generator has been fitted.

Please make absolutely sure that there aren't any persons within the operating range of unit components which are operated by an electric motor (danger of crushing!). The according building regulations must be observed.



Installation and Commissioning

Attention, mains voltage! The legal national regulations must be complied with.



Installation, inspection, commissioning and troubleshooting of the control system must only be carried out by a competent electrician. Disconnect all lines to be assembled, and take safety precautions against accidental switch-on.

The control system is exclusively intended for appropriate use. With each inappropriate change or non-observance of the instructions for use, any warranty or guarantee claim will be void.

After unpacking the control, check immediately for any mechanical damages. In case of transport damage, this must immediately notified to the supplier.

If damaged, the control system must not be put into operation.



If it must be assumed that safe operation of the control or of the connected drives is no longer guaranteed, the conservatory control must be put out of operation and be secured against accidental operation.

The control must only be operated as stationary system, i.e. only in a fitted state and after completion of all installation and start-up works, and only in the environment intended for this purpose.



Elsner Elektronik does not assume any liability for changes in standards after publication of this instruction manual.

Installation of weather station and connection of drive mechanism

Position

Select an assembly site at the building where wind, rain and sun may be collected by the sensors unobstructedly. Do not assemble any construction components above the weather station from where water may drop on to the rain sensor after it has stopped raining or snowing. The weather station may not be shaded by the building or for example by trees. Leave at least 60 cm of free space beneath the weather station in order to enable a correct wind measurement and in order to avoid that the weather station is snowed in if there is heavy snowfall.


The weather station must be mounted to a vertical wall (or pylon) and horizontally in transverse direction.

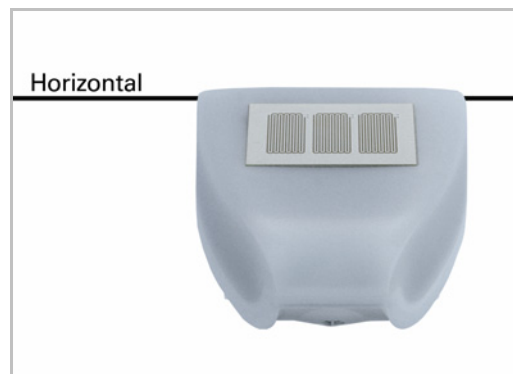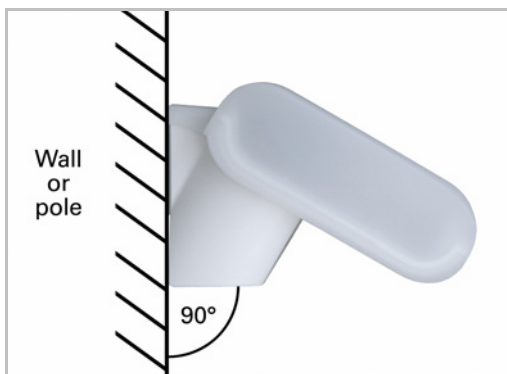


Attaching the mount

The weather station includes a combined wand/pole mount. On delivery, the mount is attached to the rear side of the housing with an adhesive strip.


Fasten the mount vertically onto the wall or pole.

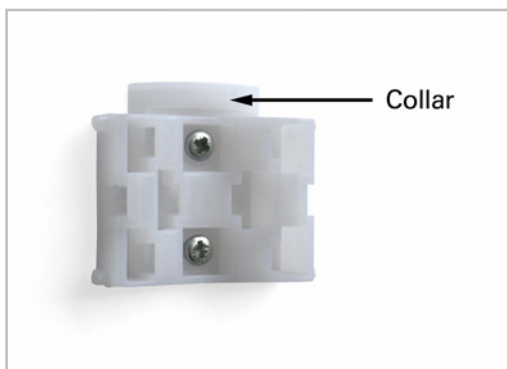

When wall mounting: flat side on wall, crescent-shaped collar upward.

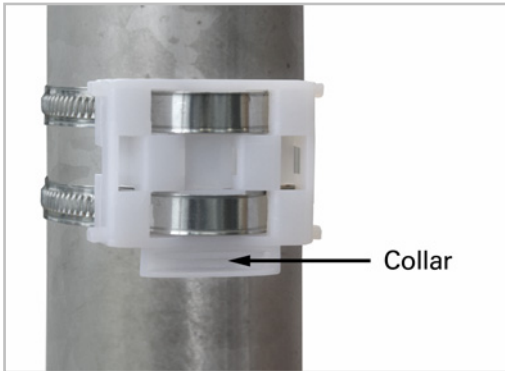

When pole mounting: curved side on pole, collar downward.

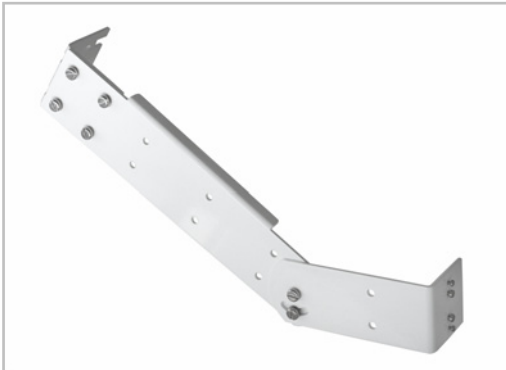

An additional, **optional accessory** available from Elsner Elektronik is an articulated arm for flexible wall, pole or beam mounting of the weather station.

Examples for the application of the hinge arm mounting:




Ex.1: With the hinge arm mounting, the weather station projects from beneath the roof. Sun, wind and precipitation can be measured unhindered by the sensors.




Ex. 2: Pole-mounting with mounting brackets.



Preparation of the weather station

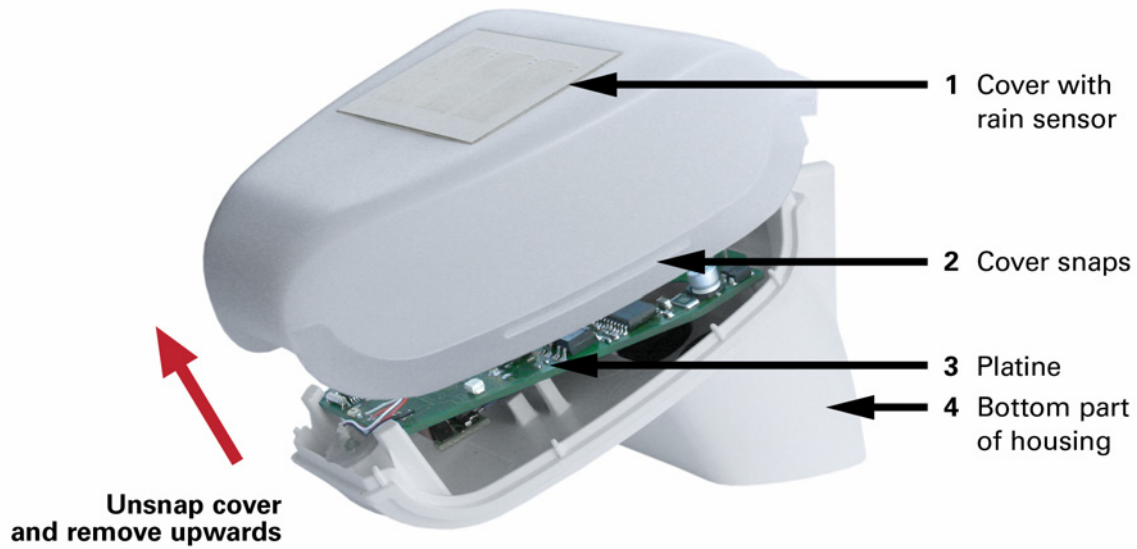

The cover of the weather station with rain sensor is engaged at the lower rim to the right and to the left (see fig.) Remove the cover from the weather station. Be careful not to break away the cable connection between the circuit board in the bottom part and the rain sensor in the cover.

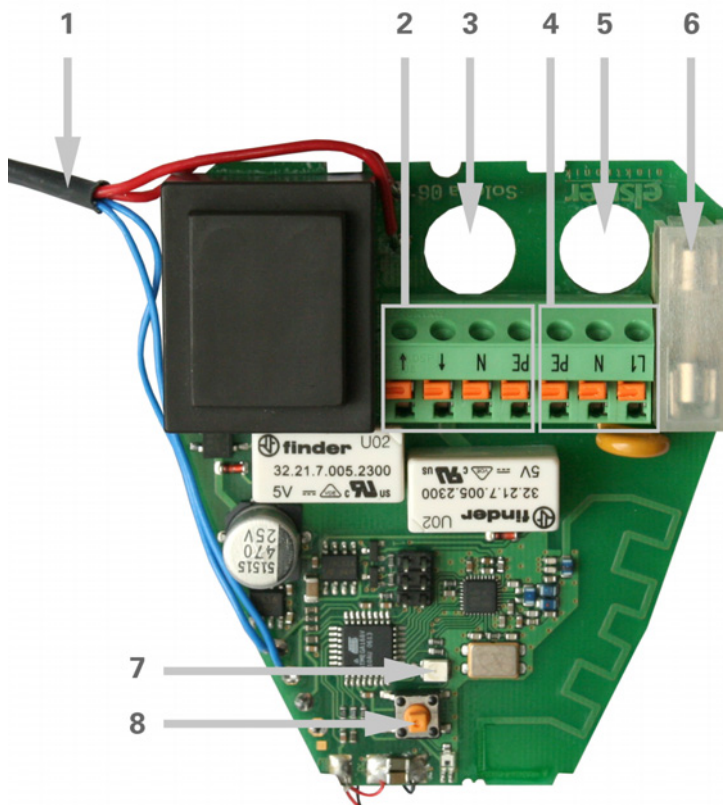

- 1 *Cable connection to the rain sensor in the housing cover*
- 2 *Connections for the drive mechanism (tension clamp, PE/N/up/down), suitable for solid conductors up to 1.5 mm² or conductors with fine wires*
- 3 *Opening for the cable for the drive mechanism*
- 4 *Connections for voltage supply (230 V AC, tension clamp, L1/N/PE), suitable for massive conductors of up to 1.5 mm² or conductors with fine wires.*
- 5 *Opening for the cable for voltage supply*
- 6 *Microfuse 6.3 A*
- 7 *Programming LED. In normal operation, this LED indicates the receipt of a valid data package by a short flashing*
- 8 *Programming key for the teaching in of the radio connection to the operating unit*

Connection of voltage supply and drive mechanism

The drive mechanism of the window is connected to the weather station. Several drive mechanisms may be connected in parallel. In case of the parallel connection of motors, please observe whether a group control relay is specified by the motor manufacturer. Group control relays may be provided by Elsner Elektronik or the motor manufacturer.

If motors are connected in parallel which are not suited for this purpose, both motor and control system are damaged.




Motors with a rated input of more than 1000 Watt must be operated with a relay or contactor with own feeder.

We offer appropriate power supply units for DC drive mechanisms. In case of need, please indicate the type of motor, manufacturer and – if available – technical data.

Pass the cable for voltage supply and drive mechanism through the rubber sealing at the bottom side of the weather station and connect voltage (L1/N/PE) and drive mechanism (PE/N/up/down) to the provided clamps.

Close the housing by putting the cover over the bottom part. The cover must engage at the right and at the left with a clearly noticeable “click”.

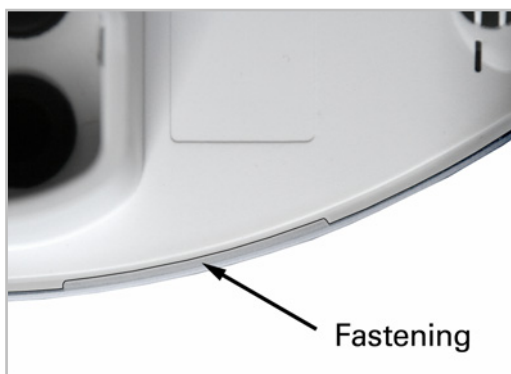

Check whether cover and bottom are correctly engaged! The figure illustrates the closed weather station from below.

Mounting of the weather station



Push the housing into the mounted holder from above. The journals of the holder must engage with the rails of the housing.

If you want to remove the weather station, you must pull it out of the holder in upwards direction against the resistance of the engagement.

Details for the installation of the weather station

Do not open the weather station if water (rain) might ingress: Even some drops might damage the electronic system.

Observe the correct installation. Wrong installation might destroy the weather station and the control electronics.

Please take care not to damage the temperature sensor (small circuit board at the bottom part of the housing.) when mounting the weather station. Please also take care not to break away or bend the cable connection between the circuit board and the rain sensor when connecting the weather station.

Installation of operating unit

The operating unit is battery-powered and communicates with the weather station per radio.

When you select the assembly site, please avoid direct sun because this would distort the measurements of the indoor temperature. The appropriate sensor is integrated in the lower part of the operating unit. For the same reason, the operating unit should not be installed above the heater. Please make also sure that there is no direct air supply coming from windows or doors which would distort measured values.

The operating unit may be installed and operated in dry interior rooms only. Relative air humidity may not exceed 80%. Avoid condensation.



Notes on radio installations

Please make sure when planning that there is appropriate radio reception. The operating range of radio control systems is limited by the legal regulations for radio installations and by structural conditions (if the radio signal must permeate through walls and ceilings).

In order not to affect the quality of reception, a minimum distance of 30 cm between the radio transmitters should be adhered to. Both operating unit and weather station should therefore be assembled in adequate distance to other radio transmitters. Strong local radio installations (e.g. radio headsets) which transmit with equal frequency (868.2 MHz) may interfere with reception. Furthermore, the operating unit should not be installed in the direct vicinity of metallic surfaces.

Commissioning


If a device is brought from a cold to a warm area, condensation can form. Before starting the device up, please ensure there is no moisture inside it (if necessary leave to dry).




After the system has been wired and the connections have been checked, please proceed as follows:

- Switch on the power supply voltage of the weather station.

- Insert batteries in the operating unit as described in chapter “Insert batteries”.
- The display of the operating unit now indicates that the radio connection between weather station and operating unit is not taught in.

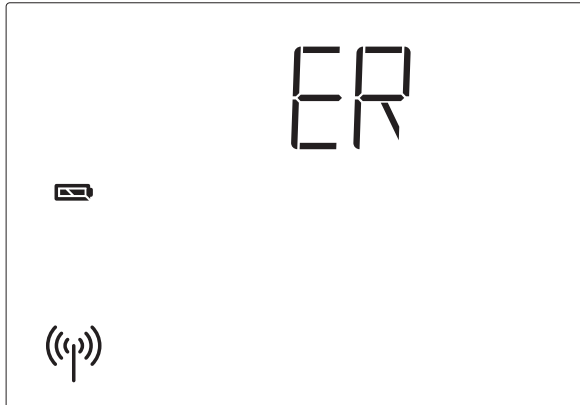

- Press SET key for 3 seconds until the following display appears:

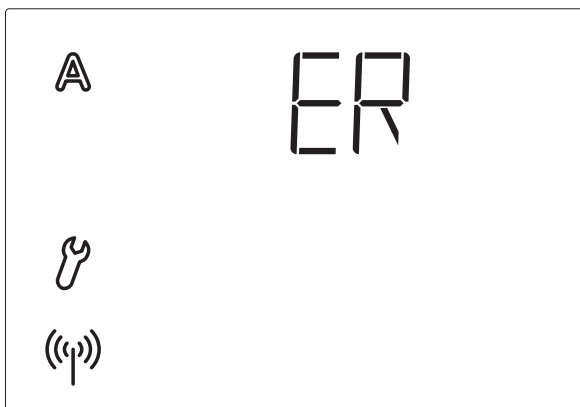

- Press SET again for 3 seconds until the display for the teaching in of the radio connection appears.



Now you are in basic settings. Proceed as described in the basic settings chapter „1. Radio connection to weather station“ (p. 16).

- Then check the function of the sensors (see next chapter).

Sensor testing

In case of malfunctions of the sensors, the display shows error messages instead of values. Please observe the chapter „Error messages“ on this.

Sun sensor testing

By the short pressing of the SET key on the operating unit you get to the lightness display (see chapter "Display of lightness and wind speed"). The upper value indicates the intensity of lightness in kilolux (kLux).


The sun sensor is located beneath the frosted glass cover of the weather station. If lightness is not sufficient, you must illuminate the weather station from above with a powerful torch until a value is indicated.

Wind sensor testing



By the short pressing of the SET key on the operating unit you access the wind speed display (see chapter "Display of lightness and wind speed"). The lower value indicates the speed in meters per second (m/sec). The sensor pipe is on the front side at the bottom part of the weather station. If you blow in there, the value in the display changes.

Note: During the first approx. 90 seconds after the return of voltage at the weather station, the wind value is not displayed correctly (e.g. after a power fail or in case of a first start).

Rain sensor testing

Humidify one or several of the golden sensor areas in the cover of the weather station. The  symbol (rain alarm) appears in the display. For this purpose, the rain alarm in the automatic settings must be activated (this is the presetting as delivered, also see chapter "G. Rain alarm"). Please observe that the rain message is maintained for 5 minutes after the drying of the sensor.

Temperature sensor testing

If reasonable values are displayed next to the symbols  (outdoor temperature) and  (indoor temperature), a correct function may be assumed.

Service

Service and maintenance

Weather station

The weather station must regularly be checked for dirt twice a year and cleaned if necessary. In case of severe dirt, the wind sensor may not work properly anymore, there might be a permanent rain message or the station may not identify the sun anymore.

In case of power fail, the entered data will be stored for approx. 10 years. Batteries are not necessary for this purpose.

For safety reasons, the weather station should be disconnected from the mains current (e.g. deactivate/remove fuse) if you want to accomplish maintenance and cleaning works.



Operating unit


Clean the display with a wet cloth, if necessary.

Insert batteries (operating unit)

The battery compartment is inside the housing.



Open the operating unit by unlocking the locking at the lower rim of the housing. For this purpose, you must press with a screwdriver straight into the gap.

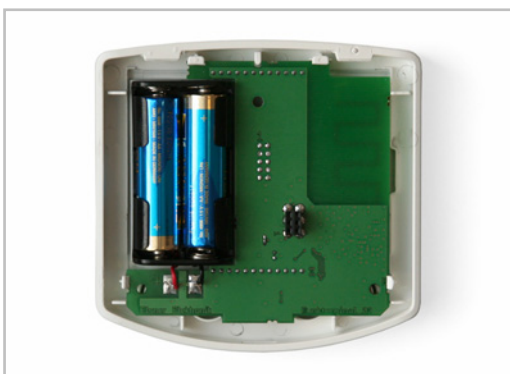


Observe the correct polarity of the batteries. You need two standard batteries (1.5 V) or accumulators (1.2 V) of type AA (Mignon/ LR6).

Close the housing by fitting the front panel with circuit board from above into the rear panel. The locking must engage with a clearly noticeable "click".

Error messages

Despite the values for temperature, lightness or wind speed, the display may indicate error messages in the meteorological data display.




Error:

Battery is displayed, no other symbols or values. Manual operation is possible.

Cause: Batteries in the operating unit are empty and must be changed. Attention: The function of the operating unit may not be guaranteed anymore.

Action: Change batteries as described in chapter "Insert batteries".

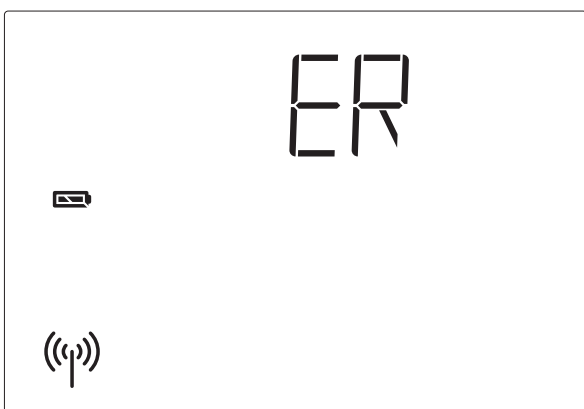

Error:

ER and the symbol for radio appear in the display.


Cause: No radio connection between operating unit and weather station. The weather station is out of order (e.g. has no voltage) or the radio connection is interrupted or has not yet been taught in.

Action:

The error may only be corrected by a qualified person for electronics. Therefore, please contact your fitter.



The teaching in of the radio connection between weather station and operating unit is described in chapter "1. Radio connection to weather station".

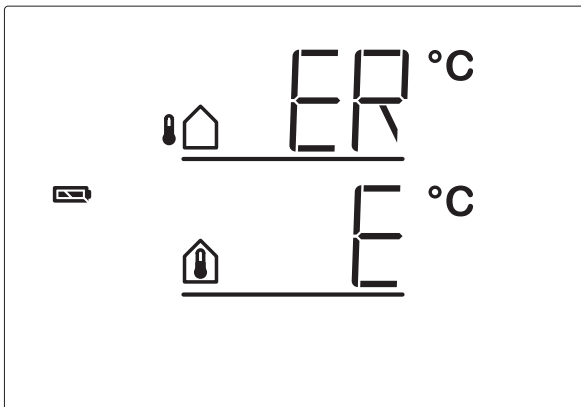


Error:

ER instead of outdoor temperature or
E instead of indoor temperature

Cause: The outdoor temperature sensor of the weather station or the indoor temperature in the operating unit is defect.

Action:

The error may only be corrected by a qualified person for electronics. Therefore, please contact your fitter.

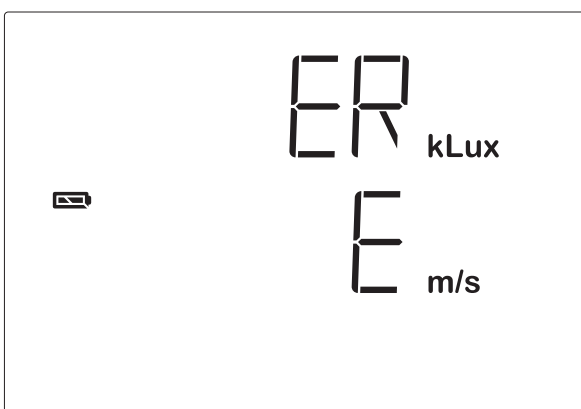

Error:

ER instead of lightness or
E instead of wind speed

Cause: Lightness sensor or wind sensor of the weather station are defect.

Action:

The error may only be corrected by a qualified person for electronics. Therefore, please contact your fitter.



Query service data

The software version of the operating unit and the weather station may be indicated in the display. From the basic settings you may get to the service menu by a long pressing of SET (3 seconds). At first, the software version of the operating unit (**PAN**, panel) is indicated, after the short pressing of SET, the software version of the control/weather station (**AR**, Arexa) is indicated. Display 10 means version 1.0, 12 means 1.2, etc. Quit the service data display by another short pressing of SET.

Factory settings

The following presetting for the automatic is stored when the Arexa control system is delivered:

- Opening from indoor temperature > 25°C
- Blocking until outdoor temperature > 5°C
- Wind alarm beginning with 4 m/sec
- Rain alarm activated

Abbreviations

kLux: Kilolux (= 1000 Lux), unit of light intensity.
m/s: Metres per second, unit of wind strength

Technical data

The applied radio frequency is 868.2 MHz.

The following standards have been considered for the evaluation of the product in terms of electro magnetic compatibility:

- EN 61000-6-1 (2004)
- EN 61000-6-3 (2001)
- ETSI EN 301 489-1 V1.6.1 (2005-09)
- ETSI EN 300 220-1 V1.3.1 (2000-09)
- ETSI EN 300 200-3 (2000-09)

The product has been tested for the above mentioned standards by an accredited EMV laboratory.


Operating unit

Operating voltage	2 x 1.5 V (2 batteries, AA/Mignon/LR6) or 2 x 1.2 V (2 accumulators, AA/Mignon/ LR6)
Ambient temperature storage	-10°C to +50°C
Ambient temperature operation	0°C to +50°C
Air humidity	max. 80% rF, avoid bedewing
Dimensions of operating unit	Approx. W=103 mm, H=98 mm, D=28 mm

Weather station

Operating voltage	230 V AC
Ambient temperature	-30°C to +60°C
Dimensions of weather station	Approx. W=96 mm, H=77 mm, D=118 mm
Output	Withstands max. 1000 W, protected with a microfuse T 6.3 A
Heater for rain sensor	Approx. 1.2 Watt
Measurement range of temperature sensor	-40°C to +80°C
Resolution of temperature sensor	0,6°C
Measurement range of sun sensor	0 to 150 lux
Resolution of sun sensor	1 kLux
Measurement range of wind sensor	0 m/s to 35 m/s
Resolution of wind sensor	1 m/sec


Connection diagram for weather station

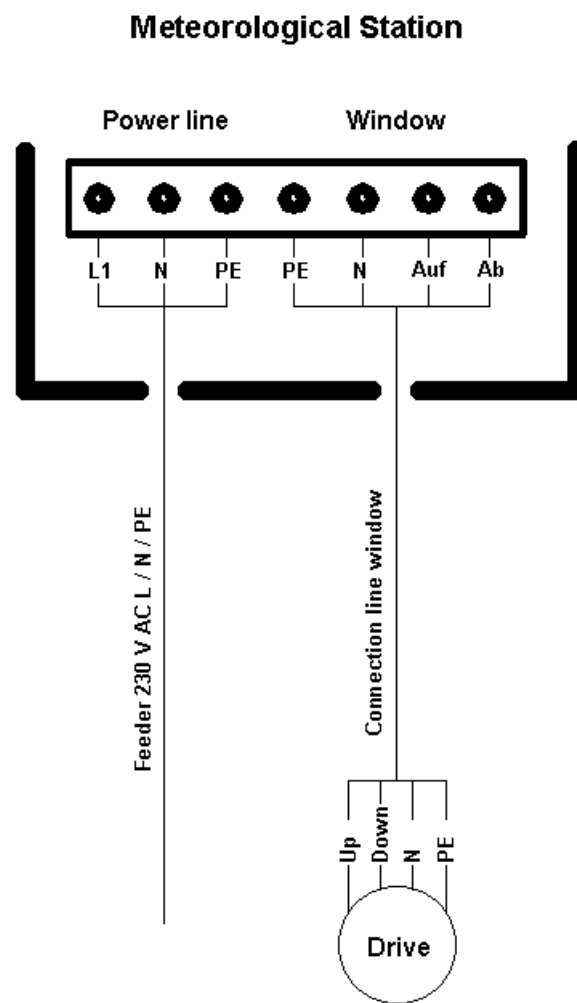

The operating unit is battery-powered. The communication between operating unit and weather station is accomplished by radio.



View of rear side and drill hole plan for the weather station

All values are in mm, deviations due to technical reasons are possible.

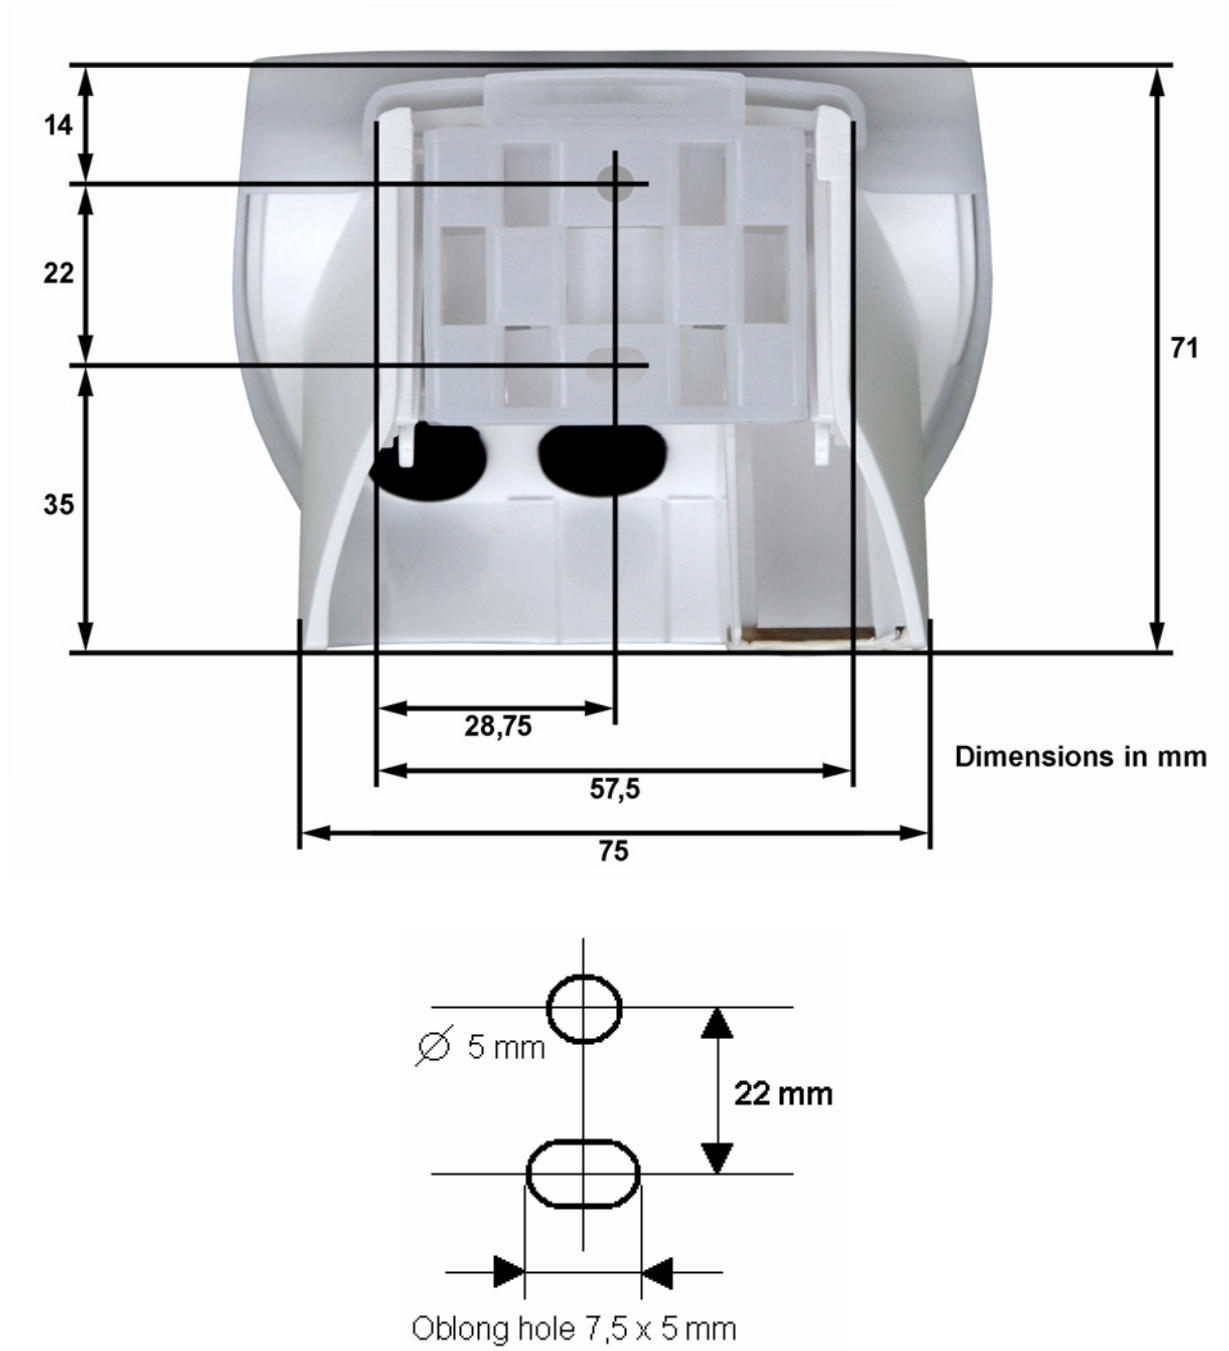

View of rear side and drill hole plan for the operating unit





All values are in mm, deviations due to technical reasons are possible.

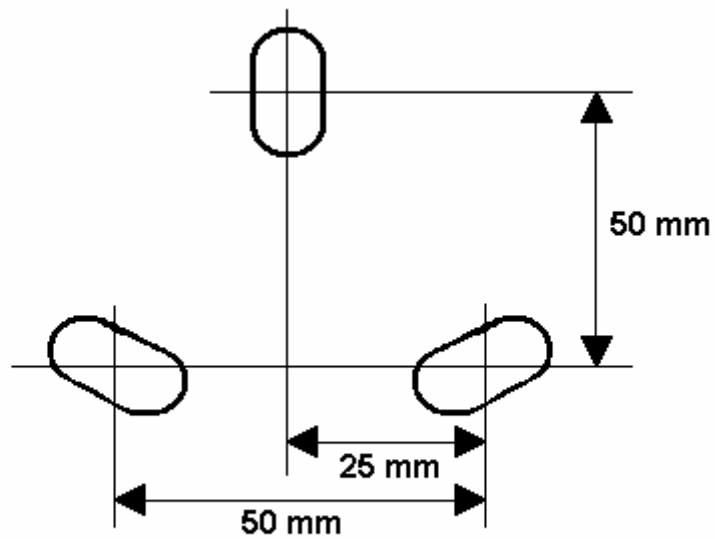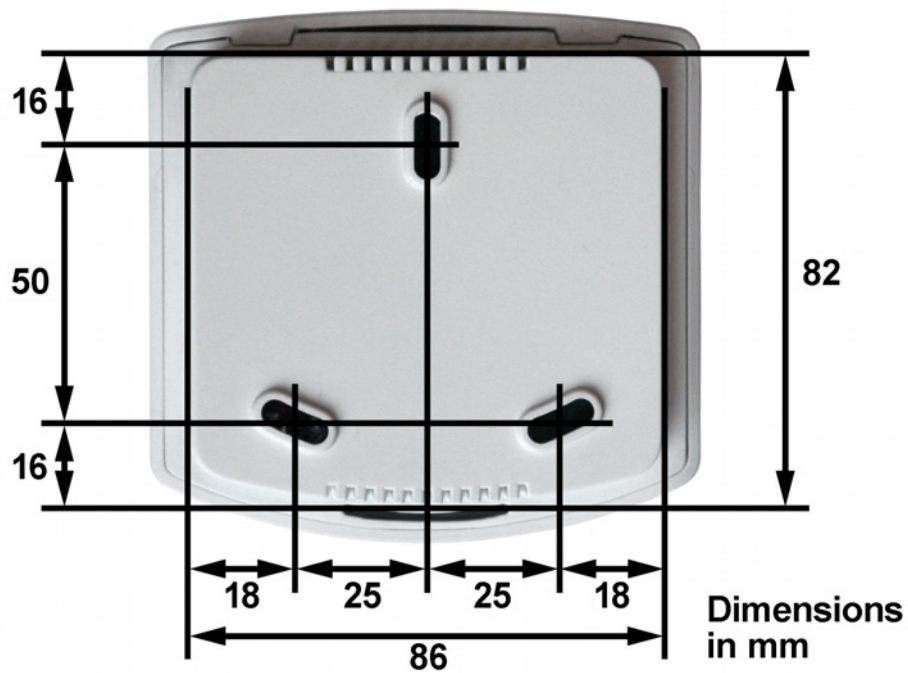

3 x Oblong hole 13 x 5 mm

Connection samples for several drive mechanisms as group

Connection examples for several drives!

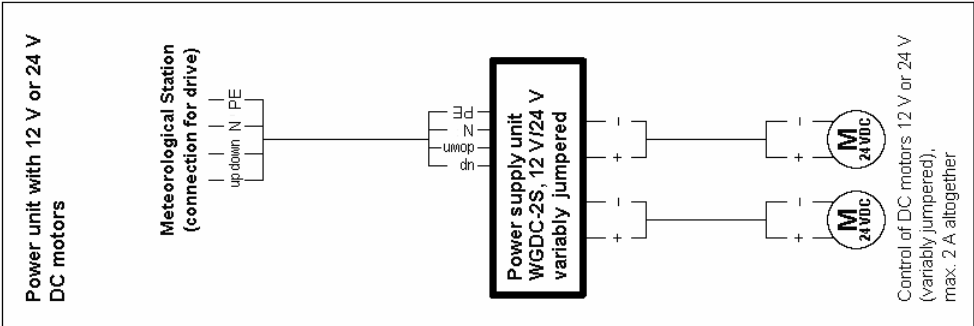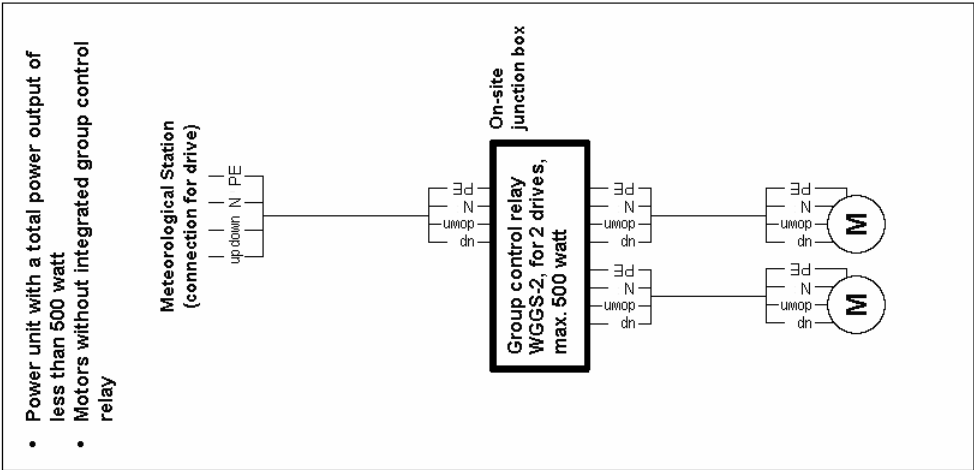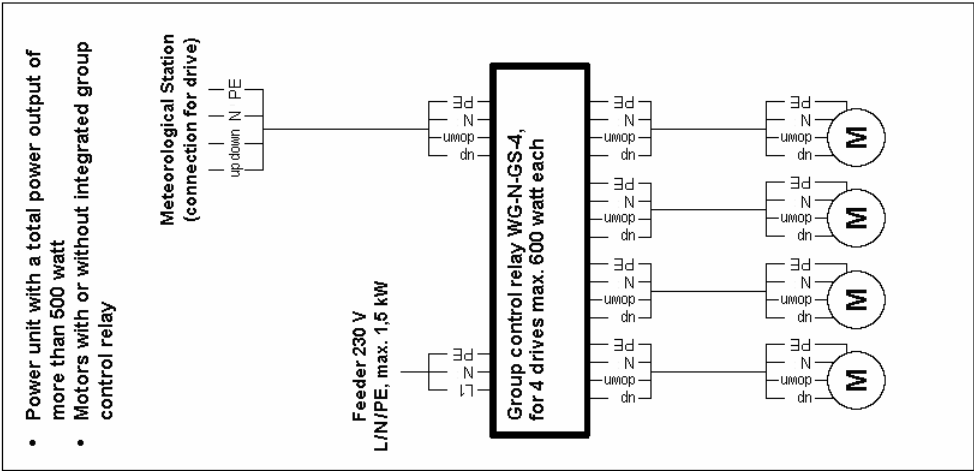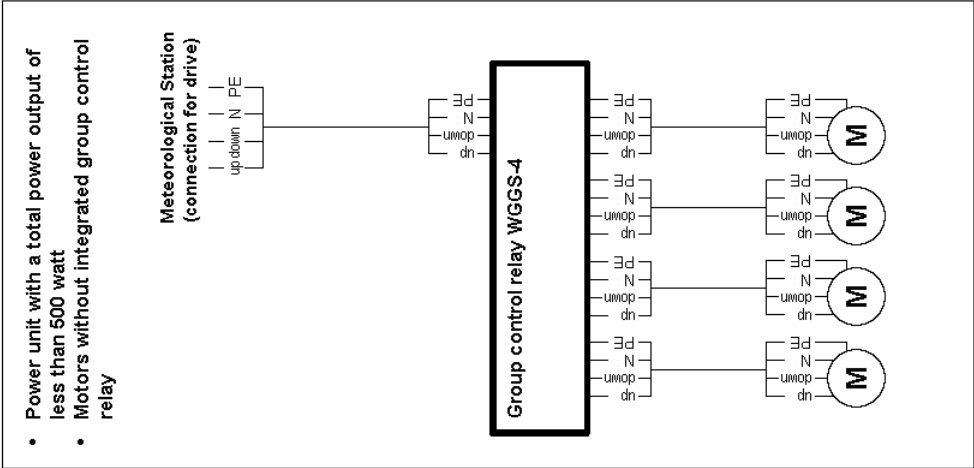

Personal setting data of the automatic

Opening if indoor temperature exceeds		°C
Outdoor temperature block below		°C
Wind alarm from		m/sec
Rain alarm		(Yes/No)

Elsner Elektronik GmbH
Steuerungs- und Automatisierungstechnik

Herdweg 7
D-75391 Gechingen
Germany

Phone: +49(0) 70 56/93 97-0

Fax: +49(0) 70 56/93 97-20

info@elsner-elektronik.de
<http://www.elsner-elektronik.de>

elsner[®]
elektronik