

Installation and Operating Instruction for B.E.G. - Occupancy detectors PD4-M-1C-FC/-FM


1. Mounting preparations

Work on the 230 V mains supply may only be carried out by qualified professionals or by instructed persons under the direction and supervision of qualified skilled electrical personnel in accordance with electrotechnical regulations.

Disconnect supply before installing!

When in Master/Slave mode of operation, the Master-appliance must always be installed at the location where there is least daylight.

2a. Installation of the LUXOMAT® PD4-M-1C-FC

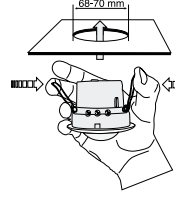


The detector has been designed and developed specifically for installation in suspended ceilings.

A circular opening of diameter 68 - 70 mm must first of all be produced in the ceiling.

Having connected up the cables in accordance with regulations, the detector is inserted into the opening as shown in the drawing opposite and fixed into position with the assistance of the spring clip.

2b. Installation of the LUXOMAT® PD4-M-1C-FM

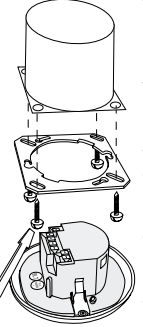


The detector can be installed in conventional inlet-sockets mounted on the ceiling.

The assembly plate enclosed must be stripped off prior to installation and secured to the ceiling using 4 screws and ensuring that it is not laterally transposed.


Having connected up the cables in accordance with regulations, the detector can be placed in position as shown in the drawing opposite and, applying a little pressure, can then be locked into position with the assistance of the spring clips.

2c. Self test cycle

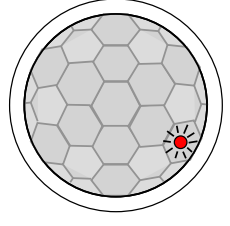

The product enters an initial 60-second self-test cycle, when the supply is first connected. The occupancy detector is ready for operation.

3. Putting into operation / Settings

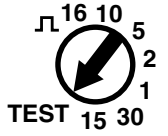


Follow-up time for light control

The time can be set infinitely variably at between 15 seconds and 16 minutes.

Symbol \square : impulse < 1 sec.

Symbol TEST: Test mode

(Every movement switches on the light for a period of 1 second, switching it off for a period of 2 seconds after that regardless of the level of brightness.)

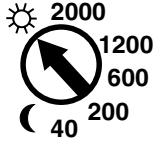

Twilight-switch for light control (relay 1)



The switch-on value for the light can be set at between 10 and 2000 Lux. Using the rotary control, the luminance set points can be set as desired.

Symbol ☾ : Night-time operation

Symbol ☀ : Daytime/Night-time operation

4. Settings carried out using remote control (optional)

Remote control LUXOMAT IR-PD

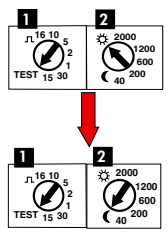

1. Check Battery:

open battery compartment by pressing the plastic springs together and removing the battery-holder.

2. IMPORTANT

Please pay attention, that the setting is Potentiometer 1 at "TEST" and Potentiometer 2 **not** at "SUN". All values which have been programmed using the remote control will be deleted in the event of power failure in the position "TEST/SUN". Please switch Potentiometer 2 over to "MOON" or any other value.

Caution:

Settings with remote control supersede the settings by courtesy of potentiometers.

Option:



IR-PD



Wall bracket for remote control IR-PD



IR-PD-Mini

Unlocking device

20 Lux (1000 Lux) Luminance set point

👁 Automatic reading in the current light value as new luminance set point
Individual light value 2 - 2500 Lux

15 sec / 30 min Follow-up time (relay and channel 1)
15 sec. up to 30 min.

\square Impulse function (relay and channel 1)
1 sec. ON, 9 sec. OFF

🔒 Preset/ user mode

☀ Fully automatic/ semi automatic mode => (see page 2, point 5)
Semi automatic: red LED (flashing),
Fully automatic: red LED on for ca. 3 sec.

🔄 Resetting when open
All values which have been programmed using the remote control IR-PD are deleted, and those values which have been set by potentiometer are activated.

Lock device

Lock device

TEST Test mode
Reset to deactivate

RESET Resetting when closed
The lighting relay is switched off, i.e. opened and the follow-up times reset.

🔒 Permanent protection against sabotage
This function blocks the unit permanently (green LED is illuminated). This operating mode can only be activated during the period of 5 seconds after pressing the "lock" button. This status will only permit actuating the function "Light on/Light off".
The procedure for leaving this mode is as follows:
1. Switch off the current
2. Apply current for 31 - 59 seconds
3. Switch of the current again
4. Apply current
5. Open detector

☀ Light on/off
The light will remain switched on/off for as long as movements are detected in the areas of coverage. Once the last movement has been detected, the light will remain on for the duration of the follow-up time as per setting.
The appliance will then return independently to the mode selected (Fully or Semi-automatic).

5. Fully / Semi automatic mode

(for IR-PD functions see page 1)



Fully automatic operation

In this operating mode, the lighting switches automatically on and off for increased comfort, depending on presence and brightness.

Semiautomatic operation

(Semiautomatic can only be activated via the remote control!)

In this operating condition, in order to gain increased savings, the lighting is energized only after being manually switched on.

Switch-off takes place automatically.

The semiautomatic mode basically behaves like the fully automatic one. However, the difference is that switching-on must always be carried out manually!


As many (closer-contact) buttons as desired can be wired in parallel on the "S" button input (ON/OFF).

6. Manual Switching




You can switch the lighting on and off manually by pressing the pushbutton for a short time. It will stay on or off as long as people are detected plus the configured follow up time.

7. Range of Coverage

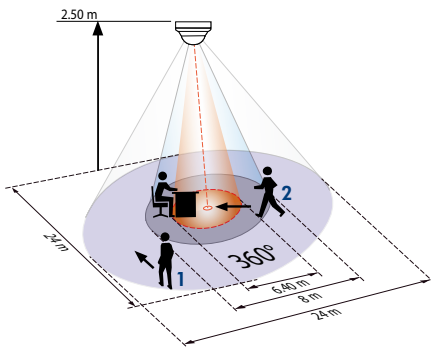


- 1 walking across
- 2 walking towards
- 3 seated

8. Exclude sources of interference (PD4-M-1C-FC)

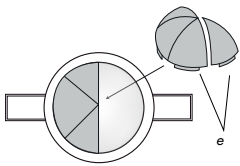


In case the sensing area of the LUXOMAT® PD4-M-1C-FC is too large or areas are being covered that should not be monitored, the range can be reduced or limited through use of the enclosed masking clips (e).

9. Wiring diagrams

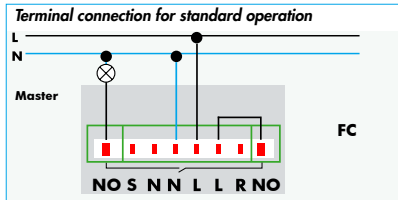


Standard operation

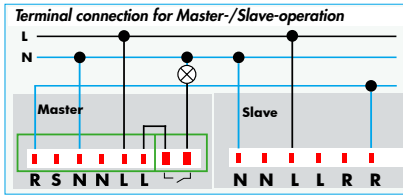

Master-/Slave-operation with one Master and several Slaves.

The Master is the only unit to read in the Lux levels and to switch the connected loads. The Slave units will react on motion only, independently of the Lux levels, by sending an impulse via the dry contact, to the Master.

10. PD4-M-1C - Connections

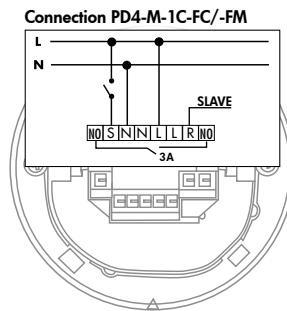

11. Article / Part nr. / Accessory

Type	FC	FM
PD4-M-1C	92585	92575

LUXOMAT® Remote control:

IR-PD (incl. wall bracket)	92160
IR-PD-Mini	92159

Accessory:

BSK Ball basket guard	92199
Wall bracket for remote control as replacement	92100
Socket IP54	92161

12. Technical data PD4-Master-1C

Sensor and power supply in one case

Power supply: 230 V~ +6%/-10%

Power consumption: < 1 W

Ambient temperature: -25°C to +50°C

Degree of protection/class: FC and FM IP20 / II

Settings: locally and by remote control

Light values - IR-PD: 10 - 2000 Lux

Extension of the detection area: with Slaves

Area of coverage: circular 360°

Range of coverage Ø H 2.50 m / T= 18°C:

seated 6.40 m / tangential 24 m / radial 12 m

Recommended height for mounting: 2 - 3 m

Light measurement: mixed light, daylight + artificial light

Lux values - Potentiometer: 10 - 2000 Lux

• **Relay/Channel 1 for light-connection**

Type of contact: NOC/with pretravel tungsten contact

Contact load: 2300 W, 230 V~, 10 A cos(φ)=1 /

1150 VA cos(φ)=0.5

Max. no. of series-connected electronic ballasts:

max. 50 electronic ballasts by one single supply with max. 100 m cable run and a conductor cross-section of 0.75 mm²

Time-settings: 15 sec. - 16 min. (30 min. with remote control) / test

Dimensions H x Ø [mm] FC FM

PD4-M-1C 97 x 103 84 x 106

Visible portion when built into ceiling: 34 x 103 mm

Technical data PD4-Slave

Electrical data same as above, but just one channel for signaling motion detection.

Ⓒ Declaration of Conformity: The product complies with the low voltage recommendation 2006/95/EC and the EMV recommendation 2004/108/EC

13. LED-functional indicators, fault-finding

The functional indicators in the case of the LUXOMAT® PD4-M-1C-MASTER (red and green LED's)

Red LED indicating self-checking mode (over a period of 60 seconds following mains-supply lock-on)

Flashing at intervals of 1 second

EEPROM/ memory empty

Flashing rapidly

EEPROM/ memory contains information

Red LED as an indicator of status

Flashing irregularly

Movements are detected within the area of coverage

Flashing regularly

Detector identifies bright, light off

(dependent upon operating mode)

Not illuminated

Detector identifies dark, light on

(dependent upon operating mode)

Flashing extremely rapidly

Too bright / Too dark / Undefined

Red LED as an acknowledgement of receipt for commands from the remote control

Illuminated for 2 seconds

Signal validly received

Illuminated for 0.5 seconds

Not-accepted command, detector blocked

Flashing extremely rapidly

Not-accepted command, occurs, for example, when an attempt is made to input twilight-value are too bright or too dark

Lights up for 3 seconds

Fully automatic mode

Flashing for 3 seconds

Semi automatic mode

Flashing irregularly

Movement are detected within the area of coverage

Flashing regularly

Detector identifies bright, light off

(dependent upon operating mode)

Not illuminated

Detector identifies dark, light on

(dependent upon operating mode)

Illuminated for 2 seconds

Signal validly received

(dependent upon operating mode)